




# How to lubricate Greist Buttonholer

In order to properly maintain the Buttonholer, apply oil to these specific areas.


Written By: Michael Sykes

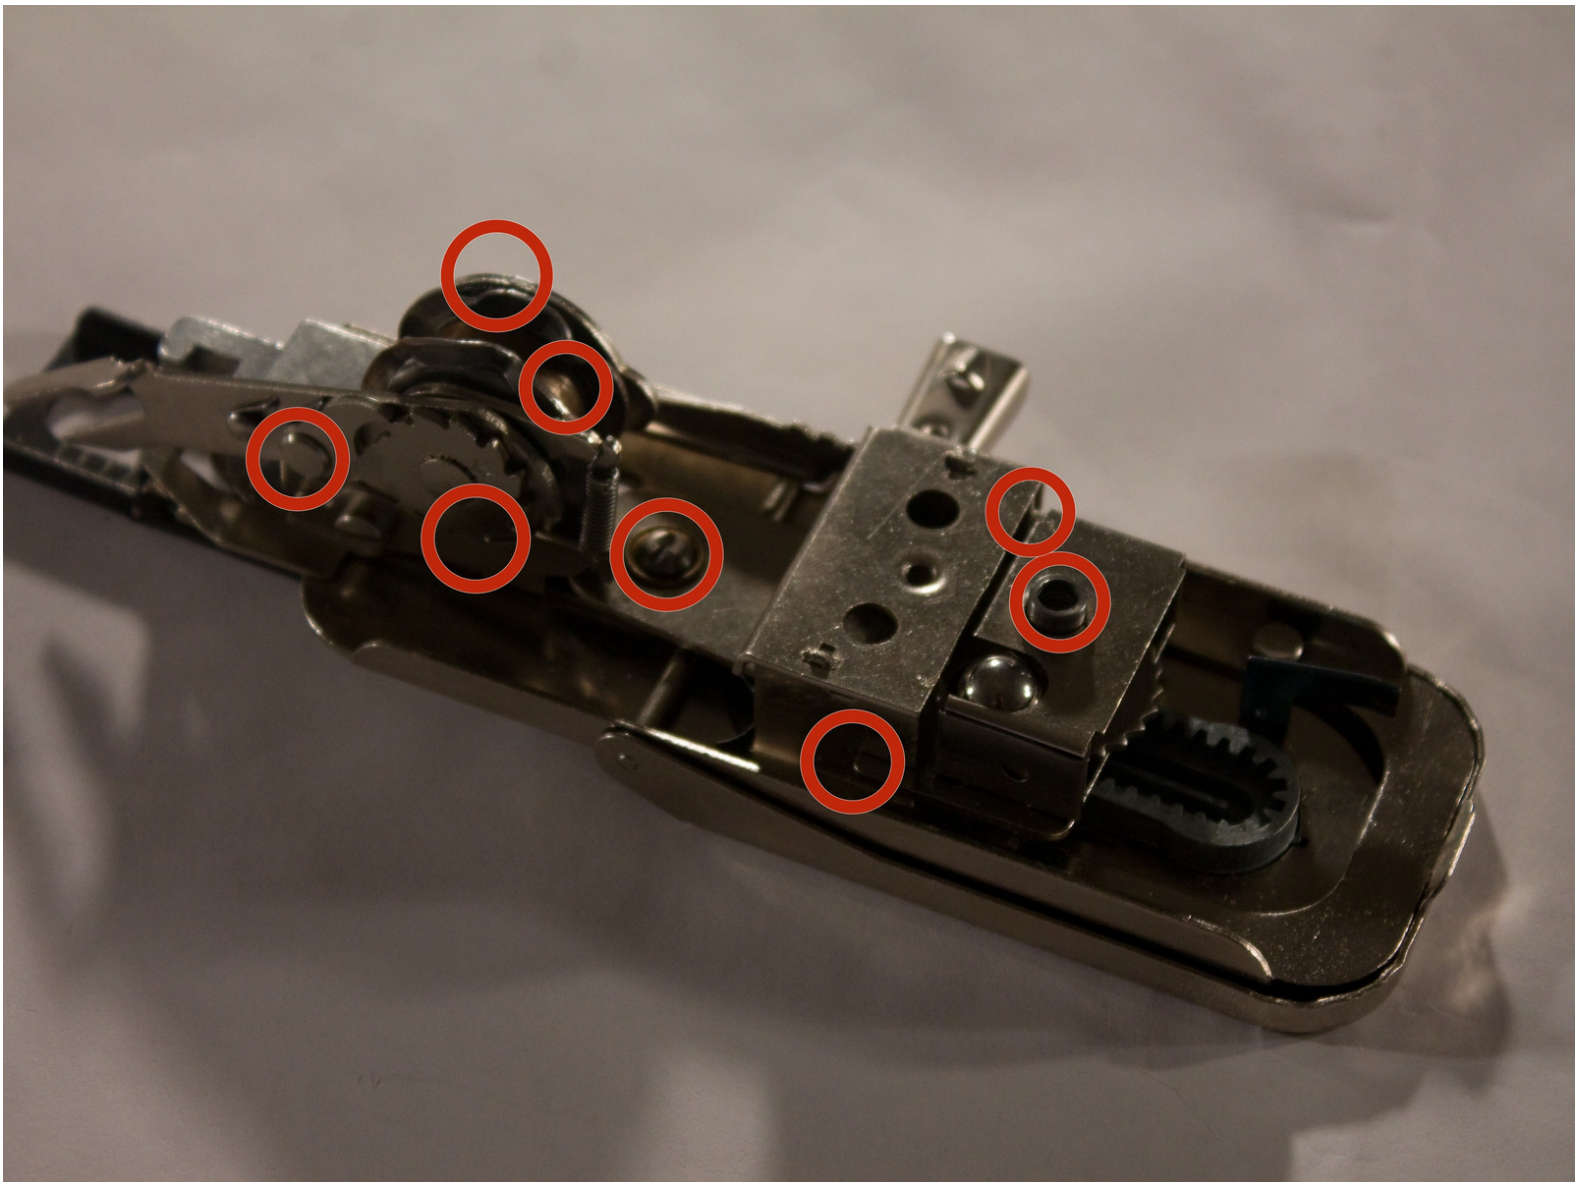

## INTRODUCTION

In this guide, we will show you how to properly maintain the buttonholer. To ensure it works properly, you will need to lubricate certain points of the machine.

## Step 1 — Adding the oil

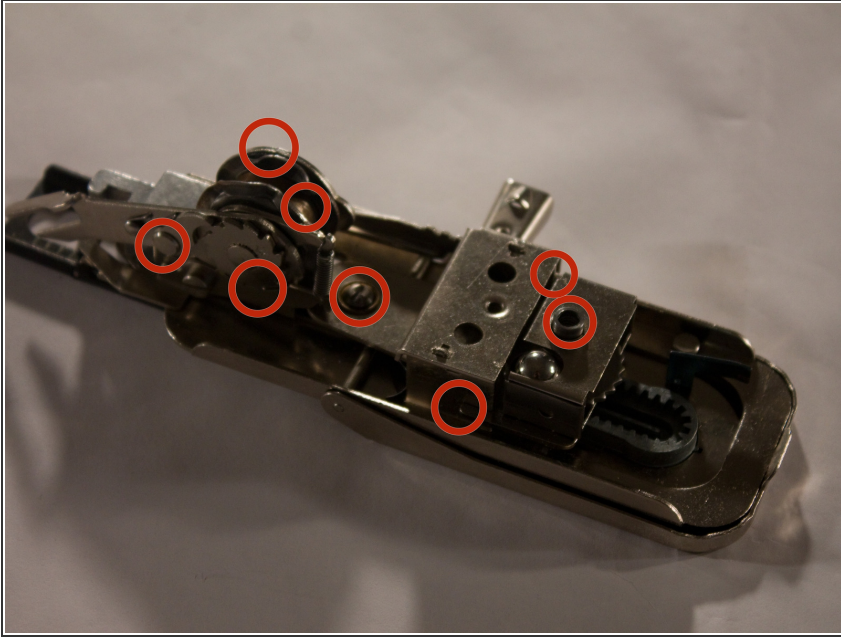


- Apply a drop of lubricant at each of the points indicated here.

## Step 2 — Wipe off the excess lubricant



- This is to prevent soiling the work.

### Step 3 — Apply Lubricant to the Back

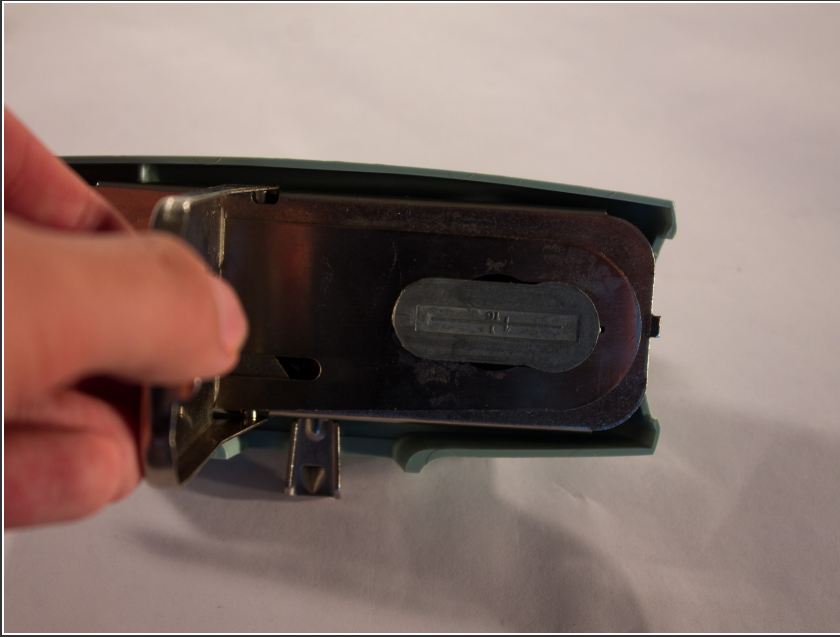

- Turn the Buttonholer over.
- Open the template retainer plate, and remove the template.
- Apply a drop of lubricant to the area indicated.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 02:36:28 PM.